

FREYJA COCKPIT TENT - RECOMMENDED METHOD OF ERECTION AND DISMANTLING

Erecting the cockpit tent is best achieved with two people.

Please ensure that all ZIP parts are fully connected - see photo:



There are 8 components: the upper cover, 4 wraps for the supports, 3 panels (2 side and 1 rear panel). The upper cover is stored in one bag, the remaining items are stored in a separate bag.

1. The cockpit canopy has a zip on the upper surface



2. The upper cover is zipped to the cockpit canopy:



3. One person lifts the 2 frame bars from the aft deck and holds the bars vertically. Slide the adjuster to a position just forward of the centre of the 2 mainsheet winches



4. Drape the upper cover over the frame bars and loosely attach the 2 'tails' to the saddles fixed to the aft side of the coaming.
DO NOT TIGHTEN THESE STRAPS



5. Attach the 3 small white velcro straps to the rear rear frame (only 2 are shown)



6. ZIP closed the interior cover over the rear frame



7. Zip closed the interior cover over the second frame

No photo

8. Zip the rear window to the cover. There are 2 zips which start at the centre. Once the rear window has been fitted, attach the lower edge of the rear window to the 'Lift the dot' studs.


Adjust the 2 tails (para 4). Now move the sliders (see para 3) aft to tension the canopy. The sliders should be no further aft than the centre of the mainsheet winches.

9. Zip in the 2 side panels and secure the lower edge to the lift-the dot studs.

10. The side panels can be left rolled up.

Please do not crease the transparent section of the panel.

When the side panels are lowered, to enter/exit the cockpit, recommend that both the zip to the cockpit canopy AND the rear zip be raised.

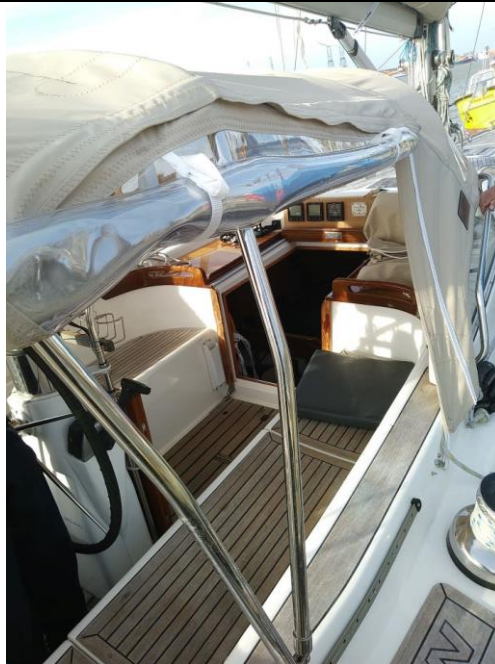

The exposed vertical bars can have protecting covers fitted.

Dismantle the tent.

Remove the protective covers from the frame. Remove the 2 side panels and the rear panel.

If possible, wipe dry the plastic windows and the ROLL up the panels to avoid creasing the plastic.

Bag the panels with the 4 frame covers.

Undo the 2 zips in the roof of the tent covering the frame and the 3 velcro straps on the rear frame.

Release the 2 tails (para 4). Lower the frame and move the sliders forward so that the frame lies next to the cockpit coaming.

Unzip the upper cover from the cockpit canopy.

Fold and bag the upper cover.